A harness:



If needed, fill the spaces in your harness with extra fibers.



Polish the harness exit.



Cut the fibers with a plastic cutter.



Insert the harness into your projector.