


Panelboards:

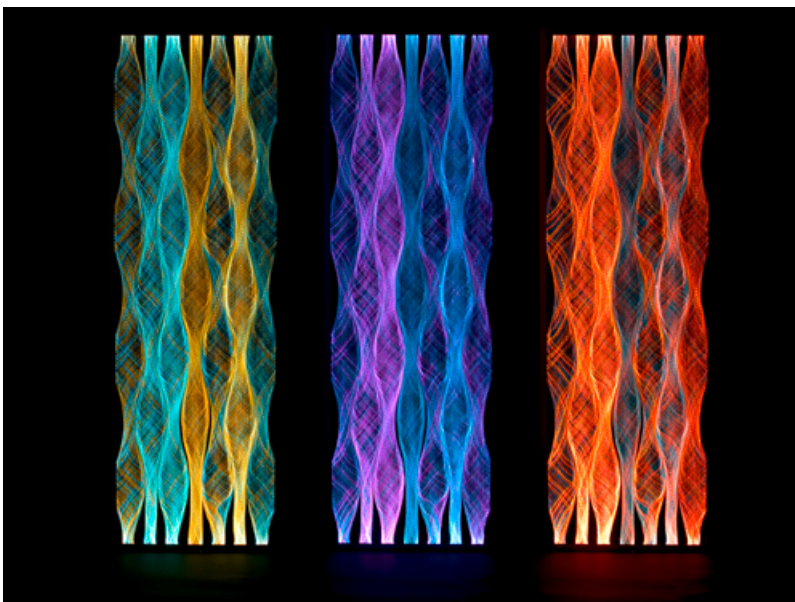

The finished panel




Use double sided sticky rolls or sheets. We strongly recommend thick materials. Use a pattern form or model to cut out the desired shape from the sticky sheet.




Remove the finished cut double-sided form.



Press the form onto the panelboard. Shape and press the MacBeam fiber on top of it.

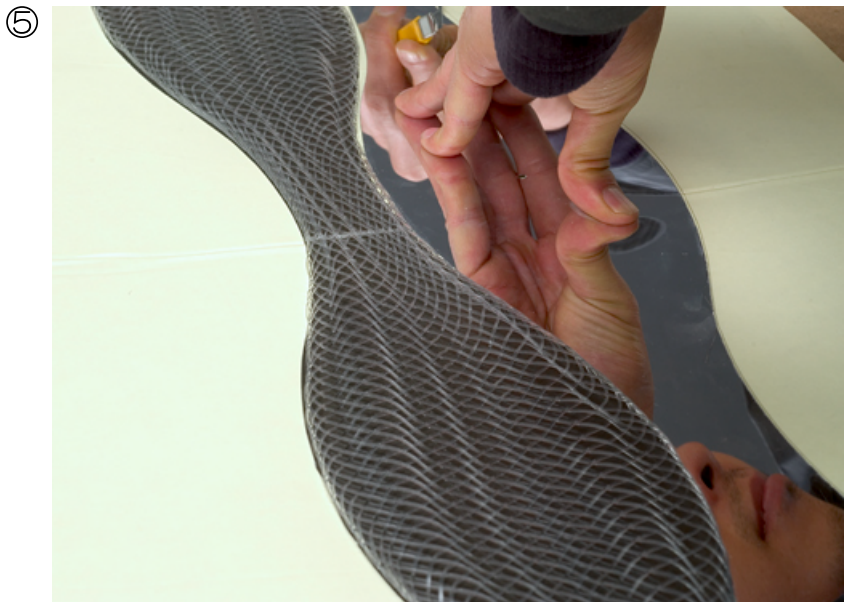

Continue step ② to ④ until the desired design is achieved. Cover with a transparent surface.

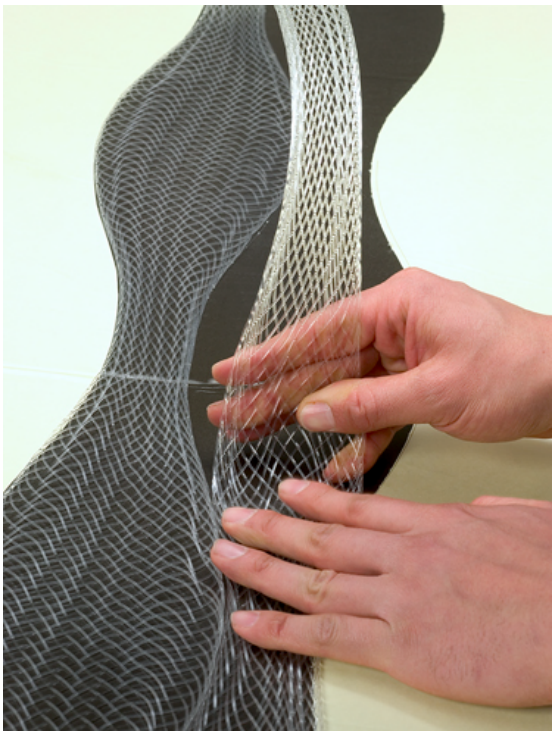

Besides using double-sided tape or sheets to attach the MacBeam fiber to your panel, another way is using lock ties. First drill holes into your panel.



Insert tie mounts.



Use tie bands to hold MacBeam fibers in place.



Cut the tie band ends.



Continue step ⑥ to ⑨ until the desired design is achieved.